10 Operating Instructions and Installation

10-1 Front



1. Menu button

Opens the OSD menu. Also use to exit the OSD menu or return to the previous menu.

2. MagicBright button

MagicBright is a new feature providing optimum viewing environment depending on the contents of the image you are watching. Currently six different modes are available: Custom, Text, Internet, Game, Sport and Movie. Each mode has its own pre-configured brightness value. You can easily select one of six settings by simply pressing MagicBright control buttons.

1) Custom

Although the values are carefully chosen by our engineers, the pre-configured values may not be comfortable to your eyes depending on your taste. If this is the case, adjust the brightness and contrast by using the OSD menu.

2) Text: Normal brightness

For documentations or works involving heavy text.

3) Internet: Medium brightness

For working with a mixture of images such as text and graphics.

4) Entertain

For watching motion pictures such as a DVD or Video CD

3. Brightness button

When OSD is not on the screen, push the button to adjust brightness.

2,3. Adjust buttons

Adjust items in the menu.

4. Enter button

Activates a highlighted menu item.

5. Auto button

Use this button for auto adjustment.

6. Power button / Power indicator

Use this button for turn the monitor on and off. /This light glows green during nomal operation, and blinks green once as the monitor saves your adjustments..

10-2 Rear



1. Power port

Connect the power cord for your monitor to the power port on the back of the monitor.

2. D-sub 15-pin port


Connect the signal cable to the 15-pin, D-sub connector on the back of your monitor.

3. Kensington Lock

The Kensington lock is a device used to physically fix the system when using it in a public place. (The locking device has to be purchased separately.)

To get the information on using the Kensington Lock, contact an aurhorized dealer.

10-3 Monitor Assembly

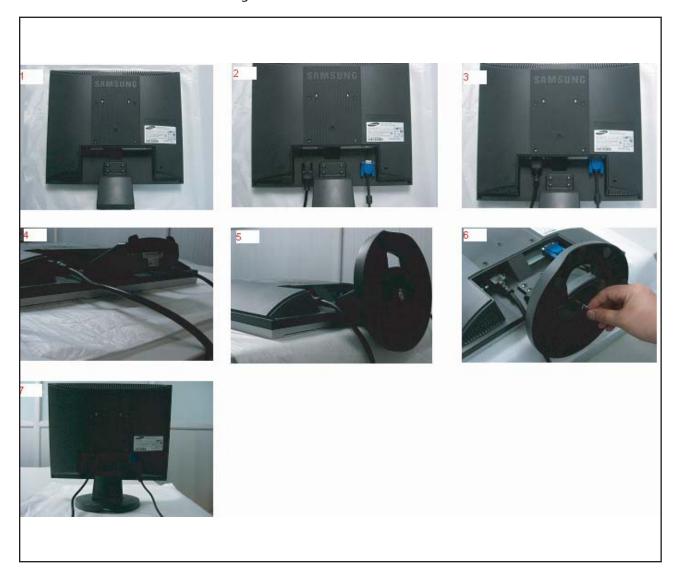

10-4 Attaching a Base



A. Monitor

B. Mounting interface pad

- 1. Turn off your monitor and unplug its power cord.
- 2. Lay the LCD monitor face-down on a flat surface with a cushion beneath it to protect the screen.
- 3. Remove four screws and then remove the stand from the LCD monitor.
- 4. Align the mounting interface Pad with the holes in the rear cover mounting pad and secure it with four screws that came with the arm-type base, wall mount hanger or other base.